

Lamp Kit 8

Ref:
IS-03

Kit Contains:

1x Lampholder
1x Cable Cord Set
1x Wood Nipple
1x Cord Grip
2x Screws

Before you start please ensure you are competent to carry out electrical works and ensure the electricity is turned off.

If in any doubt stop what you're doing and seek professional advice.

Step 1: Drill an approx. 8mm hole in your wooden lamp, depending on the wood you may need to drill slightly bigger or smaller (Please start smaller and work your way up if needed)

Step 2: Separate the Lampholder into its 3 sections and screw the wood nipple into the bottom section of the Lampholder.

Step 3: Inside the base of the Lampholder is a small silver screw this will need to be tightened up to lock the Lampholder base to the wood nipple.

Step 4: Using the base of the Lampholder as grip thread the wood nipple into the light fitting (Do not use any grips or pliers as it will damage the Lampholder)

Step 5: Once screwed fully down push the cable through the bottom of your light fitting out the top of the Lampholder base.


Step 6: Wire the earth cable (green/yellow) into the earth connection in the Lampholders base and the live (brown) and neutral (Blue) into the other 2 terminals (It does not matter which way around they go)

Step 7: Carefully push the connection unit into the base of the Lampholder and screw the top section on top.

Step 8: Ensure the indents on the base of the Lampholder aligns with the indents of the connection unit and the top section.

Step 9: Use the cord grip underneath your light fitting where possible and use the 2x screws provided.

Wiring of the lamp holder

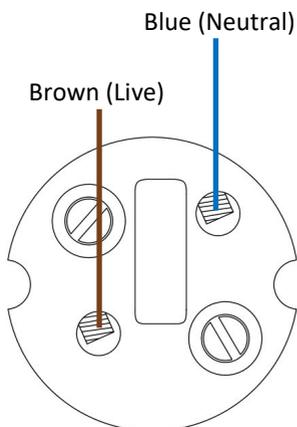

If you have any concerns or difficulties in connecting this product please contact us on details at the bottom of this manual.

All electrical parts confirm to BS 60238 and have full CE approval.

Certification can be obtained on request via email.

Please Note: This picture is for reference, It does not matter which way around the Live and Neutral goes.

The Lamp Holder has to be assembled back correctly for the light bulb to work. If the light bulb does not work please ensure the following process has been checked.

Please see images below for correct alignment of the BC Lampholder.

Top View



Indent Alignment



Rocket fuel for lamps

spares  **you**

LIAQA
ASSURED
COMPANY



Unit 3 Brookside Business Park | Brookside Avenue | Rustington | West Sussex | BN16 3LP

© Lampspares. All Rights Reserved E:contact@lampspares.co.uk | T:01903 776644