Kit32

For further information visit: support.lampspares.co.uk Search for IS32 in the search box.

Ref:

IS32

Kit Contains:

1x Cable Cord Set
1x BC Lampholder
1x Side Entry Cord Grip

Before you start please ensure you are competent to carry out electrical works and ensure the electricity is turned off.

If in any doubt stop what you're doing and seek professional advice.

This kit is intended to be fitted onto any 10mm male lighting thread.

Note: We recommend using some super glue or Loctite between the lampholder and side entry cord grip, to ensure these 2 parts do not undo after installation.

Step 1: Take the side entry cord grip and screw it onto the existing 10mm thread.

Step 2: Separate the lampholder and screw the bottom section onto the side entry cord grip.

Step 3: Push the cable through the side entry cord grip and out the top of the lampholder's bottom section.


Ensure the outer PVC of the cable is inside the bottom section of the lampholder, as shown below.

Step 4: Wire the lampholder as shown.

Ensuring you double over the tinned tips of the cable before screwing into the ceramic connection unit.

Step 5: Carefully push the connection unit into the Lampholder's bottom section.

Step 6: Screw the top section of the Lampholder onto the Lampholder's bottom section ensuring the alignment is correct.

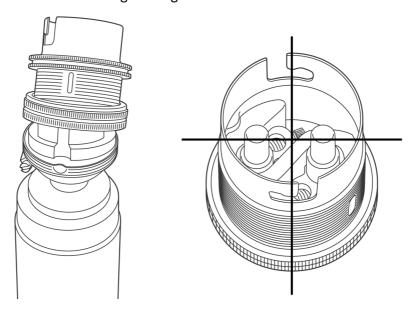

Step 7: Once the lampholder has been installed and aligned correctly, finally using a slotted screwdriver tighten the black nylon screw up on the side entry cord grip, ensuring the cable cannot be pulled out of the lampholder.

If you have any concerns or difficulties in connecting this product please contact us on details at the bottom of this guide.

All electrical parts confirm to the relevant BS numbers and have full CE approval, please email for copies.







Unit 3 Brookside Business Park | Brookside Avenue | Rustington | West Sussex | BN16 3LP E: support@lampspares.co.uk | T: 01903 776644 | KB: support.lampspares.co.uk

© Lampspares. All Rights Reserved